

HOW TO USE DASH CAMS



All our dash cams should come in these bags and each bag should always have:

- ★ Dashcam
- ★ Suction Cup Mount
- ★ USB Cable
- ★ Car Point Cable



The camera itself should have a Micro SD card in it for it to be able to store and record footage.







This is on the right-hand side of the device as shown.



The customer can purchase the SD card with an adapter if they wish for £5 on top of the price of the hire.

CONTROLS



-  = ENTER
-  = SETTINGS
-  = BACK/REFRESH
-  = SCROLLING
-  = MEDIA/PREVIOUS VIDEOS
-  = POWER

Please ensure that there is an SD card inside the dash camera before pressing the power button.

When you plug the dashcam in/turn it on it will automatically start recording. To stop the recording, press the **ENTER** button. This will allow you to access the other options on the dashcam; recorded footage & settings, etc.

To access the recorded footage, you use the button with the **CAMERAS** on it. You click this until it is on the symbol that looks like a play button and press **ENTER**.

This will then give you the option to;

PLAY PROTECT DELETE

You use the **SCROLL** buttons to select what option you want. Protecting the clip will mean it will not be deleted unless you select that specific clip (UNLOCK IT)

If you want to Delete the clip, scroll to delete, press enter. This will ask you if you want to **DELETE CURRENT** or **DELETE ALL**.

If you wish to clear the SD card then select **DELETE ALL**.

Wipe Down everything in the bag with HIGH touch point disinfectant when returned.